

# ■ STEAM IRON




KH 1281



## STEAM IRON

Operating instructions

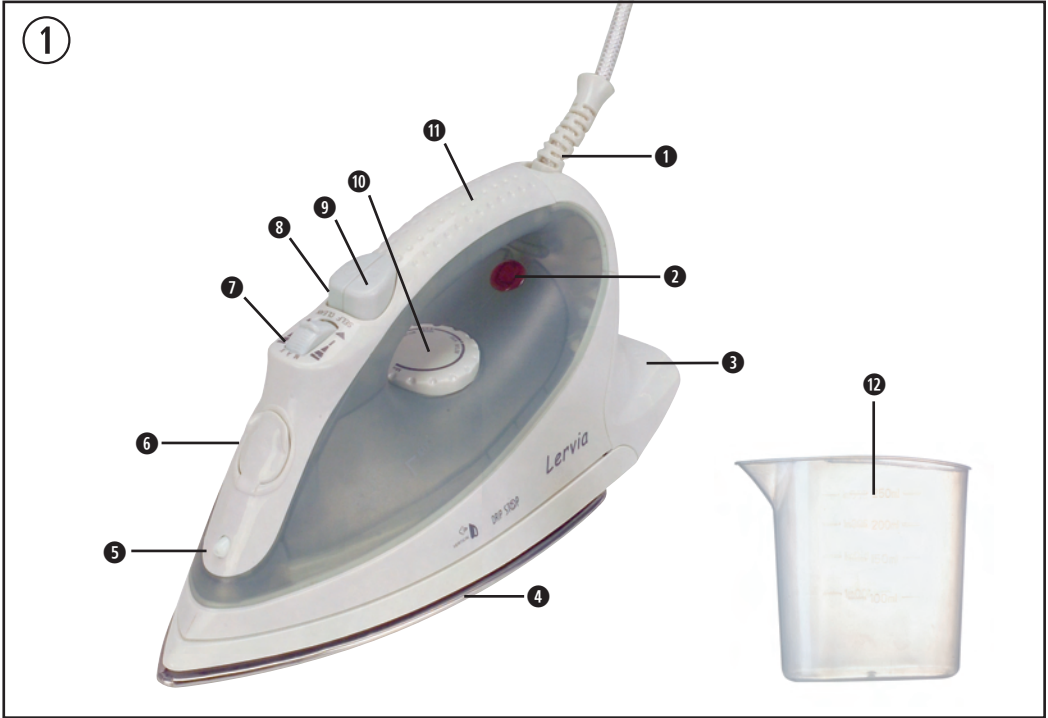

<b>CONTENT</b>	<b>PAGE</b>
<b>Basic Safety Instructions</b>	<b>2</b>
<b>Proper use</b>	<b>3</b>
<b>Before the First Use</b>	<b>3</b>
<b>Operating Elements</b>	<b>3</b>
<b>Operation</b>	<b>3</b>
Filling with Tap Water .....	3
<b>Plugging In and Ironing</b>	<b>3</b>
<b>Steam Ironing</b>	<b>4</b>
<b>Ironing with Steam Spray</b>	<b>4</b>
<b>Setting the Steam Iron Temporarily Aside</b>	<b>4</b>
<b>Putting the Steam Iron Away After Use</b>	<b>4</b>
<b>Drip-Stop Function</b>	<b>4</b>
<b>Cleaning</b>	<b>5</b>
Self-cleaning function .....	5
Casing.....	5
Metal Parts .....	5
<b>Troubleshooting</b>	<b>5</b>
<b>Technical Data</b>	<b>5</b>
<b>Disposal</b>	<b>6</b>
<b>Warranty &amp; Service</b>	<b>6</b>
<b>Importer</b>	<b>6</b>

Read these operating instructions carefully before using the appliance for the first time and preserve this manual for later reference. Pass this manual on to whoever might acquire the appliance at a future date.

# STEAM IRON KH1281

---

## Basic Safety Instructions

---

### **Risk of Burning!**

- Grasp the steam iron only by the handle when the iron is hot.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Never hold your hand over the steam spray or on hot metal parts.
- You may not open the filler opening of the water reservoir while the iron is in use. Allow the steam iron to cool down first and remove the power plug from the power socket.


### **Fire Hazard!**

- Never leave the steam iron unattended when it is hot or switched on.
- Only ever store the steam iron away once it has cooled down.
- Only ever iron with the temperature settings instructed by the care instructions for the material. You could otherwise cause damage to the material. If you do not know the care instructions, start with the lowest temperature setting.
- Grasp the steam iron only by the handle when the iron is hot.
- Never let children use the steam iron.

### **Danger of Electrocutation!**

- The mains voltage at the mains socket must match that shown on the rating plate on the device.
- If the connection lead or device does not work perfectly or is damaged, have it examined and repaired immediately at the service centre.
- Arrange for defective power plugs and/or cables to be replaced as soon as possible by a qualified technician or by our Customer Service Department to avoid the risk of injury.
- Only pull on the power plug and never on the cord.
- Never bend (kink) or crush the power cord. Arrange it in such a way that it can not come into contact with hot surfaces and such that no-one can step on it or trip over it.
- Always remove the power plug from the power socket after every use and when cleaning or filling.
- Always unroll the power cord fully before switching on and do not use an extension cord.
- Never touch the cord or the power plug with wet hands.
- Under no circumstances should you submerge the steam iron in any liquid or let any liquid into the device casing of the steam iron. You should never expose the appliance to moisture or use the device outside. Should any liquid get into the appliance casing, remove the power plug immediately from the power socket and have the appliance repaired by qualified technicians.
- Never use the steam iron near water in the bathtub, shower, wash basin or other vessels. Nearby water presents a danger, even when the appliance is switched off.
- You may never open the steam iron casing. Have the defect steam iron repaired by qualified technicians.

### **⚠ Important!**

- Should the care instructions for a clothing article not mention ironing, (Symbol ) , you should not iron that clothing article. You could otherwise cause damage to the clothing article.
- You may only fill the water reservoir with tap water. You will otherwise damage the steam iron.
- You may not clean the steam iron with solvents, alcohol or abrasive cleaning agents. You could otherwise cause damages.

## Proper use

---

The steam iron is strictly intended for ironing clothes. You may only use the iron in a closed room and in the private household. All other use is deemed improper use.

## Before the First Use

---

- Remove the steam iron from the packaging.
- Remove all stickers and films from the steam iron and the gliding sole ④.
- Plastic bags can present a danger. To avoid any danger of suffocation, keep this bag away from babies and children.
- Plug the power plug into a power socket of 230 V~/50 Hz.
- Hold the steam iron horizontally.
- Set the temperature control ⑩ to the position "MAX".
- Heat the steam iron for several minutes on the highest setting.
- Iron on a piece of scrap material to remove any possible unclean patches from the gliding sole ④.

## Operating Elements

---

**Figure 1**

- ① Movable cable guide
- ② Temperature control light
- ③ Standing foot
- ④ Gliding sole
- ⑤ Water nozzle
- ⑥ Filler opening for the water reservoir
- ⑦ Steam amount control
- ⑧ Button for the steam spray
- ⑨ Button for water fog
- ⑩ Temperature control
- ⑪ Handle
- ⑫ Measuring cup

## Operation

---

### Filling with Tap Water

- When it is cool, place the steam iron in a horizontal position on its gliding sole ④.
- Open the filler opening for the water reservoir ⑥.
- Fill the reservoir with tap water using the measuring cup ⑫, at most to the "MAX" marking.
- Close the water reservoir filler opening ⑥, making sure it "clicks" shut.


## Plugging In and Ironing

---

Dry ironing without steam is possible at all temperatures, steam ironing is only possible from setting 2 (••).

- Plug the power plug into a power socket of 230 V~/50 Hz.

### **⚠ Important!**

Should the care instructions for an article of clothing not mention ironing, (Symbol ) , you should not iron that clothing article. You could otherwise cause damage to the clothing article.

- Check the care instructions on the labels of the clothing article whether and at which temperature the clothing article may be ironed.
- Set the appropriate temperature setting with the temperature control **10**.

The control light for the temperature **2** lights up. When the control light goes out, the chosen temperature **2** has been reached.

- Wait until the temperature control light **2** goes out.
- To moisten the material, press the button for the water fog **9**.

This function is suitable for very dry, crumpled or creased materials.

## **Steam Ironing**

---

- Set the steam control **7** to the desired steam strength setting.

## **Ironing with Steam Spray**

---

The steam spray is especially suited to smoothing places in the laundry that are difficult to access.

- Raise the steam iron a little way.
- Press the steam spray button to release the steam spray **8**.

## **Setting the Steam Iron Temporarily Aside**

---

### **⚠ Fire Hazard!**

Never leave the steam iron unattended when it is hot or switched on.

- Set the temperature control **10** to the position "MIN".
- Only put the steam iron down on its standing foot **3**, fig. 2.

## **Putting the Steam Iron Away After Use**

---

- Remove the power plug from the power socket.
- Empty the water reservoir and clean the gliding sole **4**.
- Place the cool steam iron horizontally on a soft, clean base.

## **Drip-Stop Function**

---

In conventional steam irons, it is possible that at too low ironing temperature water begins to trickle from the gliding sole **4**. However, this iron possesses a new technical feature, namely the DRIP-STOP function, to switch off steam. The iron automatically switches off the steam ejection at low temperatures. A "CLICK" noise is heard when this happens.

Using the temperature rotary controller **10**, set the required temperature.

Steam generation will continue as soon as this temperature level is reached.

# Cleaning

---

## Self-cleaning function

- Fill the water container up to the marking MAX.
- Insert the plug into the power socket.
- Set the temperature regulator ⑩ to the position MAX.
- Let the iron warm up till the control light ② cuts off and lights up again.
- Hold the iron horizontally over a trap vessel.
- Set the steam regulator ⑦ to Self-Clean position and hold it in this position. Now steam and boiling water will start emerging from the steam escape holes at the gilding sole ④. Any dirt, if present, will get washed out.
- Release the steam regulator ⑦ as soon as the water in the water container is used up.
- To ensure that no water remains in the steam chamber, dry the gilding sole ④ thoroughly. For this purpose, wipe the gilding sole ④ a few times on a towel or an old cloth.
- Allow the iron to cool down before storing it away.

### **Note:**

The effect of the self-cleaning function can diminish after extended usage of the iron. We therefore recommend the addition of decalcification agent into the water tank.

## Casing

### **Danger of injury!**

Pull the mains power plug before cleaning. There is a risk of electrical shock! Allow the device to cool off. Danger of burning!

- Clean the casing only with a soft dry cloth.
- Do not use aggressive or chemical cleaning agents.

## Metal Parts

- Clean the metal parts with a cloth slightly moistened with water and a mild, non-foaming cleaning agent.

## Troubleshooting

---

### **The steam iron puts out only little or no steam**

The water reservoir in the steam iron is empty. Fill the water reservoir with tap water (see "Filling with Tap Water").

### **The steam iron does not get hot**

The steam iron is not plugged in or not switched on. Plug the power plug into the power socket and set the temperature control ⑩ to the desired temperature.

The steam iron is defect. Have the defect steam iron repaired by qualified technicians.

## Technical Data

---

Power Supply Voltage: 230 V~/50 Hz

Power: 1200 W

## Disposal

---



**Do not dispose of the appliance in your normal domestic waste. This product is subject to the European guideline 2002/96/EC.**

Dispose of the appliance through an approved disposal centre or at your community waste facility.

Observe the currently applicable regulations.

In case of doubt, please contact your waste disposal centre.



Dispose of all packaging materials in an environmentally responsible manner.

## Warranty & Service

---

The warranty for this appliance is for 3 years from the date of purchase. This appliance has been manufactured with care and meticulously examined before delivery. Please retain your receipt as proof of purchase date. Should a claim need to be made under the warranty, please make contact by telephone with our service department. Only in this way can a post-free despatch for your goods be assured.

The warranty covers **ONLY** claims for material and manufacturing defects, not for wearing or consumable or for damage to fragile components. This product is for private use only and is not intended for commercial applications.

The warranty will become void in the event of abusive and improper handling, use of force and internal tampering not carried or approved by our authorized service branch. Your statutory rights are not restricted in any way by this warranty.

### **DES Ltd**

Units 14-15

Bilston Industrial Estate

Oxford Street

Bilston

WV14 7EG

Tel.: 0870/787-6177

Fax: 0870/787-6168

e-mail: [support.uk@kompernass.com](mailto:support.uk@kompernass.com)

### **Irish Connection**

Harbour view

Howth

Co. Dublin

Tel: 00353 (0) 87 99 62 077

Fax: 00353 18398056

e-mail: [support.ie@kompernass.com](mailto:support.ie@kompernass.com)

## Importer

---

KOMPERNASS GMBH

BURGSTRASSE 21

44867 BOCHUM, GERMANY

[www.kompernass.com](http://www.kompernass.com)

